


GO/MUV Transmitter Side Programming Instructions

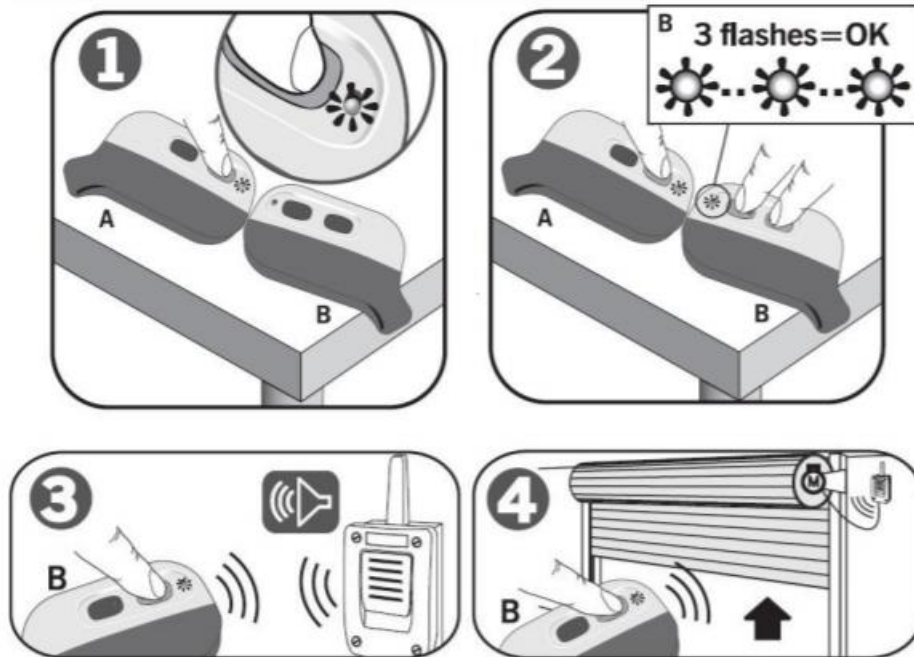

A = Existing Transmitter

B = New Transmitter to be programmed

Place both transmitters next to each other as shown on a non-metallic surface, a few metres away from the receiver.

1. Press button 1 on transmitter A and keep it pressed down.
2. Press down both buttons on transmitter B and keep them pressed until the LEDs flash 3 times.
3. Press button 1 on transmitter B, the receiver will beep.
4. Wait 10 seconds for the receiver to come out of programming mode; it will then be fully functional.

If this method doesn't work, or you have more than one receiver in close proximity, please refer to the receiver's instructions.



C Prox Ltd (inc Quantek)

11 Callywhite Business Park, Callywhite Lane, Dronfield, S18 2XP

+44(0)1246 417113 sales@cproxltd.com www.quantek.co.uk